IGNITION SYSTEMS

DELCO-REMY DISTRIBUTOR INDEX & SPECIFICATIONS

Distributor Number Note 81	Cam Angle, Degrees	Breaker Point Opening, Inch Note II	Condenser Capacity, Mfds. · Note ®	Breaker Arm Spring Tension, Ounces	Centrifugal Advance Data		Vecuum Advance Data		
					Advance Starts	Pull Advance	Inches of Vacuum to Start Plunger Movement	Inches of Vacuum For Full Plunger Travel	Maximum Vacuum Advance, Dist. Degrees
1110205 1110209 1110210 1110211 1310212 1310220	35 35 35 35 35 35 35	.020 .020 .020 .020 .020 .020	.2025 .2025 .2025 .2025 .2025 .2025	17-21 17-21 17-21 17-21 17-21 17-21	1 @ 300 1 @ 300 2 @ 400 1 @ 300 1 @ 300 1 @ 300	10 @ 1300 11 @ 1100 14¼ @ 2000 8 @ 1100 11 @ 1200	4-6 4-6 7-9 7-9 7-9 None	15-17 8-10 14½-16½0 10-12 10-12 None	7 7 5 7 7 5 5 5 None
1110402 1110403 1110407 1110408 1110410	32 ⁽⁰⁾ 32 ⁽⁰⁾ 32 ⁽⁰⁾ 32 ⁽⁰⁾ 32 ⁽⁰⁾	.020 .020 .020 .020 .020	.2025 .2025 .2025 .2025 .2025	17-21 17-21 17-21 17-21 17-21	1 @ 300 1 @ 325 1¾ @ 325	1114 @ 1200 1314 @ 1150 814 @ 600	None None None None	None None None None	None None None None

If the distributor is the one marked by a dot in the margin the second line is our line!

1111757 1111761 1111762 1111763 1111764	35 35 35 35 35	.020 .020 .020 .020 .020	.2025 .2025 .2025 .2025 .2025	17-21 17-21 17-21 17-21 17-21	1% @ 250 1 @ 250 1 @ 250 2 @ 250 1 @ 300	9¼ @ 1100 17 @ 1500 17 @ 1500 16 @ 1000 12 @ 1275	None None None None	None None None None	None None None None
---	----------------------------	--------------------------------------	---	---	--	---	------------------------------	------------------------------	------------------------------

Note:

To enlarge the screen on your browser:

PC - Control Key + "plus sign" key

MAC Open Apple Key + "plus sign" key

To make smaller

PC - use the Control Key + a "minus sign" key

MAC Open Apple Key + "minus sign" key